


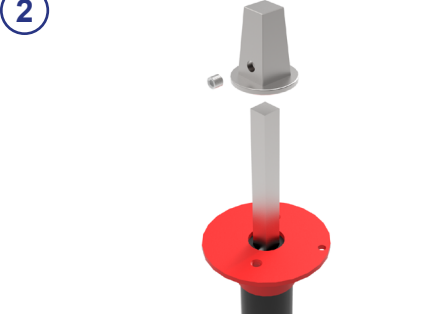
Mechanical position indicator, stainless steel

- ①




- As delivered
(Pointer on OPEN)


Screw in the anchoring-pin
- ②




- Remove the square cap from the extension
- ③

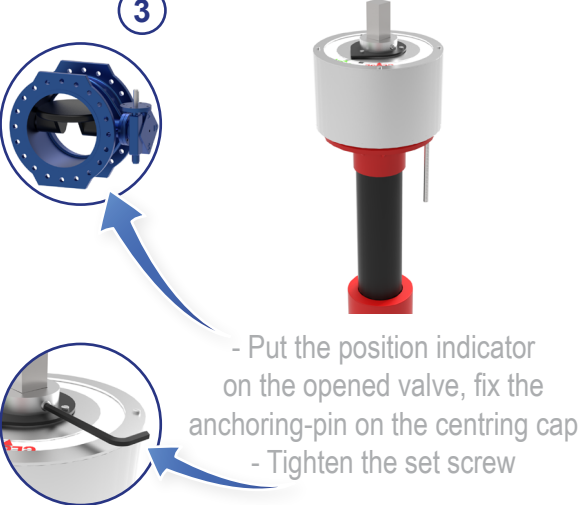


- Put the position indicator on the opened valve, fix the anchoring-pin on the centring cap
- Tighten the set screw
- ④

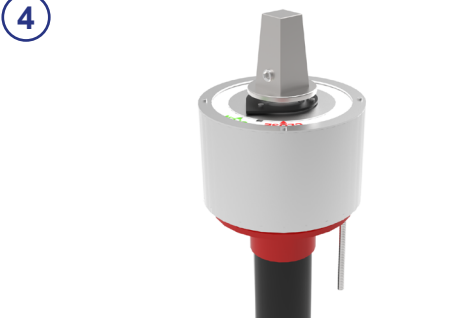

- Put the square cap back on and tighten the set screw
- ⑤

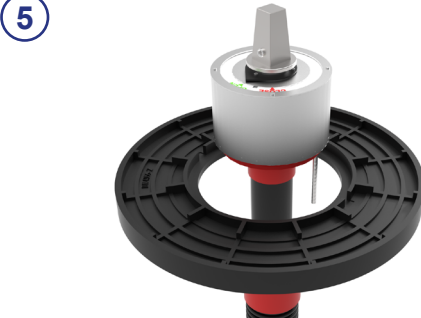


- Put on the DALMINEX support plate
- ⑥

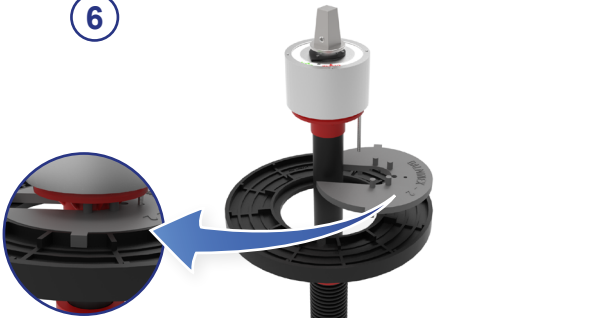


- Extend the spindle extension, insert the DALMINEX fixing disc and make sure that the centring cap and the position indicator is centered

Subject to technical modifications!

Mechanical position indicator, stainless steel

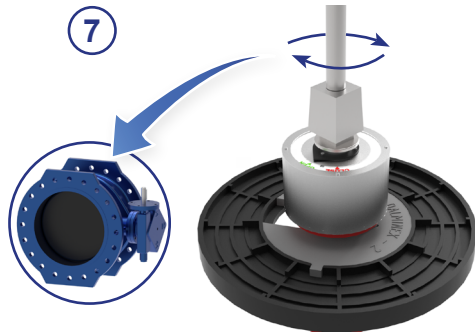

- Close the valve completely

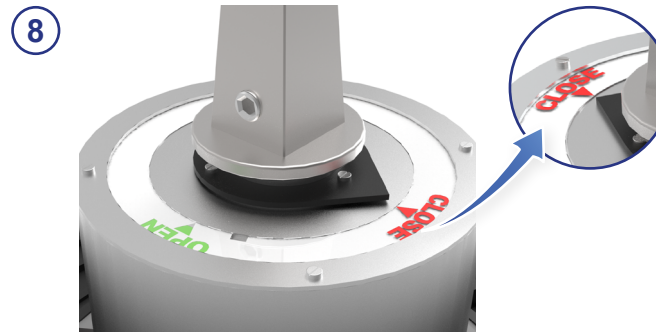

- Align the marking disc (CLOSE) according to the arrow



- Tighten the marking disc with the holding disc (4 screws)